



# Confined Space Control Covers

## ★ Velcro Tower/Vessel Skirt Covers Handling and Installation Instructions ★

\*PLEASE READ AND FOLLOW ALL INFORMATION AND INSTRUCTIONS. FAILURE TO FOLLOW INSTRUCTIONS CAN RESULT IN IMPROPER USE AND PROTECTION OF YOUR CONFINED SPACE.

\*COVERS ARE DESIGNED FOR LONG-TERM USE AND TO WITHSTAND CONSTANT EXPOSURE TO THE ELEMENTS. THE USE OF A RELIABLE ADHESIVE/EPOXY WILL ENSURE BEST RESULTS.

BEFORE INITIAL USE: Inspect product for defects. If defects are present, contact CSCC Incorporated immediately for replacement. DO NOT USE if defective.

\*Surface Preparation: For high strength structural bonds, paint, oxide films, oils, dust, mold, release agents & all other surface contaminants must be completely removed. However, the amount of surface preparation directly depends on the required bond strength, environmental aging resistance and economic practicalities.

### ADDITIONAL ITEMS YOU WILL NEED:



**Adhesive**  
(Resinlab EP1305 or other)

We recommend & stock **Resinlab EP1305**. It is highly toughened urethane modified epoxy designed for bonding PVC, metals, ceramics & other difficult to bond substrates. Bonds in extreme weather conditions. 50 mL Cartridge available.

**Rope or Elastic Cord**  
(length depends on skirt size)



**(2) - 2"-4" wide sticks/ rods**  
(per cover)



## HOW TO INSTALL


**1** \*Clean surface area. Hold cover over opening to determine correct alignment & position.



**2** Mark corners on surface to help reference proper placement when installing.



**3** Lay cover flat. Apply adhesive on back of velcro. Make sure to apply adhesive close to edges. (as shown)

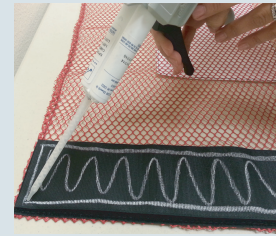

**4** Allow adhesive to get tacky for easier installation. If adhesive is not tacky enough, it may shift while trying to install, making it more difficult to secure.



\*reference adhesive's "Work life/Pot life" for proper time.

**5** Once adhesive is tacky, apply cover to the pre-marked surface. Repeatedly pat & press firmly on entire velcro surface of cover to ensure that adhesive is making contact.



**6** If there are multiple openings on one skirt, repeat this process to install other cover(s). Wrap your cords/ropes around skirt along both bottom & top of cover(s). (as shown)



**7** Install sticks, pull & tighten ropes as much as possible to ensure contact of adhesive to surface until cured. (as shown) Remove ropes & sticks when cured.



CLEANING AND STORAGE: May be cleaned with mild soap & water. DO NOT scrub with harsh or abrasive material /solvents. Rinse thoroughly then lay flat. Allow to dry completely. Once dry, roll or fold cover, stack/store in a secure location. Do not store in closed container unless completely dry and free of moisture. Wash hands thoroughly after handling.



Solid FME covers also available.



For helpful videos, information on all our cover designs, visit us online at [www.ConfinedSpaceControlCovers.com](http://www.ConfinedSpaceControlCovers.com) or [www.CSCCincorporated.com](http://www.CSCCincorporated.com)

**281-332-1511**  
info@cscincorporated.com